


ASSEMBLY INSTRUCTIONS







CH12 CH15

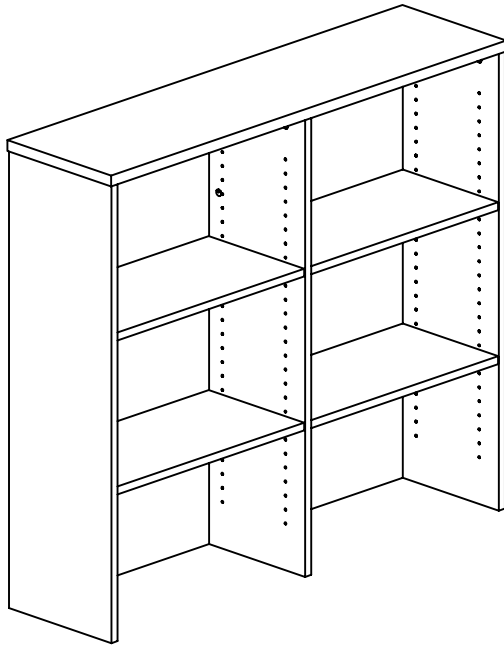

rapidline
FURNITURE FOR TODAY

2011-8-25

pin	6x35		1	18PCS
CAM			2	18PCS
Cam Cover			3	18PCS
Bolt Minifix			4	16PCS
Bracket			5	4PCS
Screw	4, A18		6	16PCS

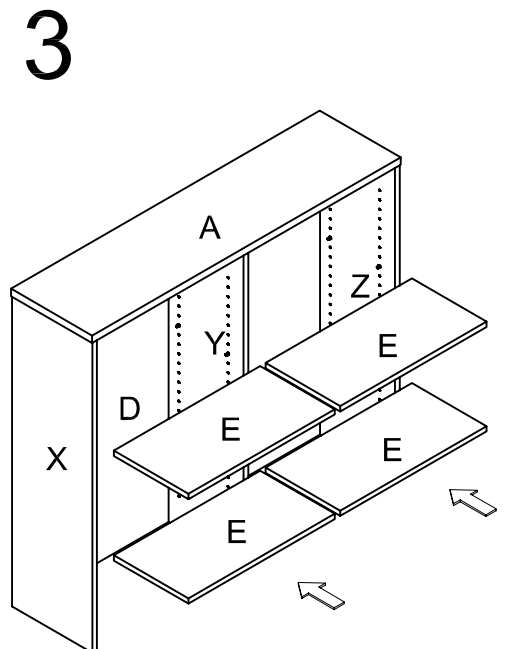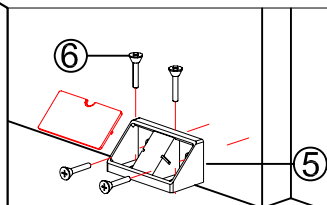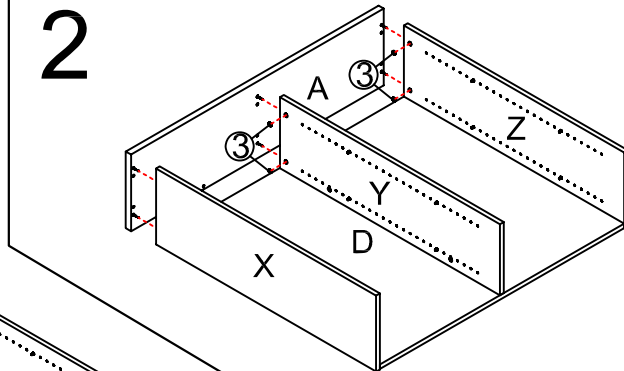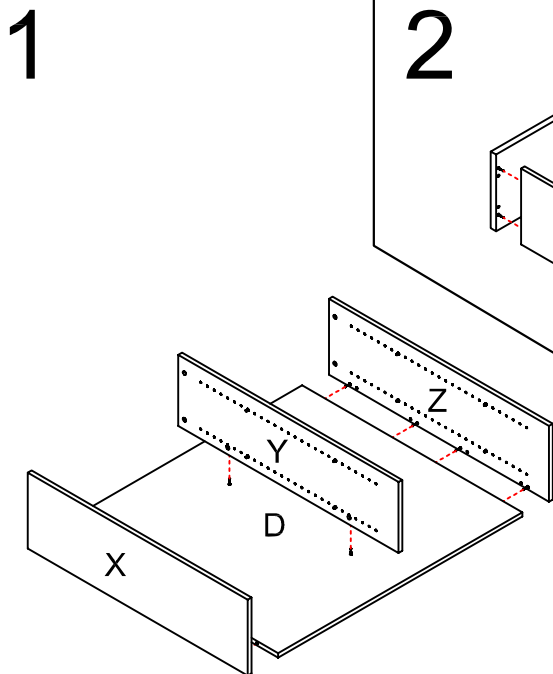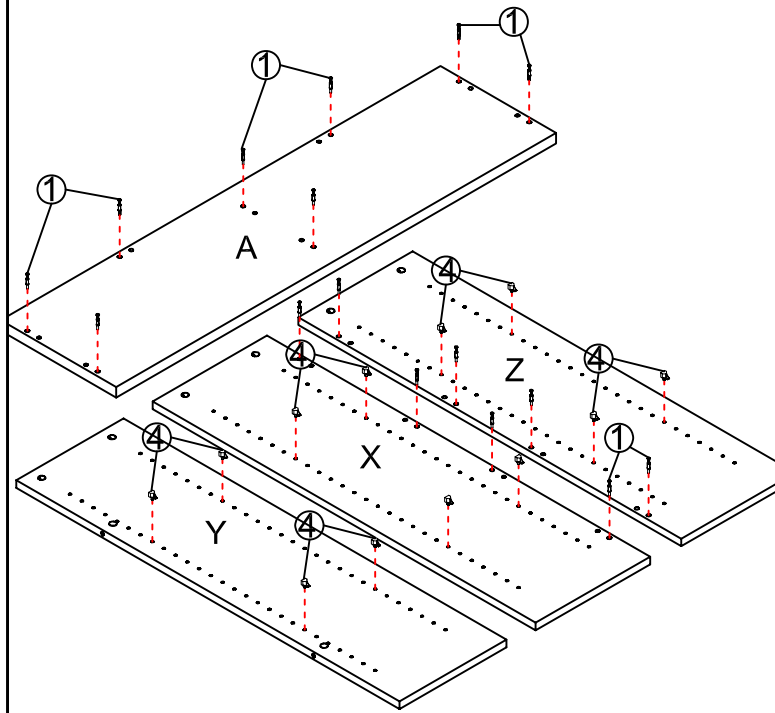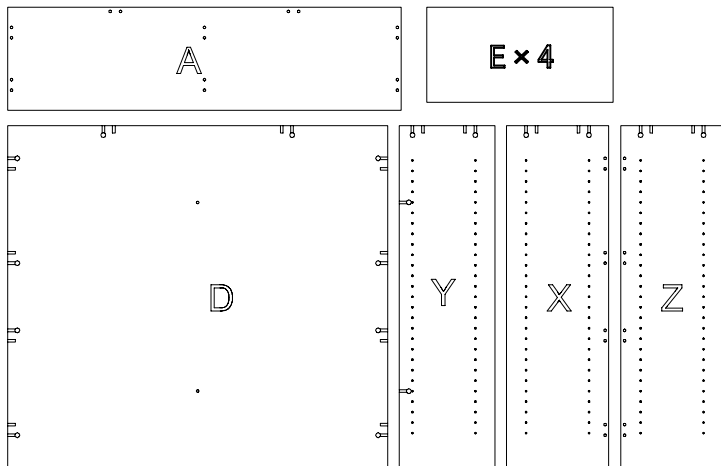


ASSEMBLY INSTRUCTIONS

CH18

rapidline
FURNITURE FOR TODAY

2011-8-25

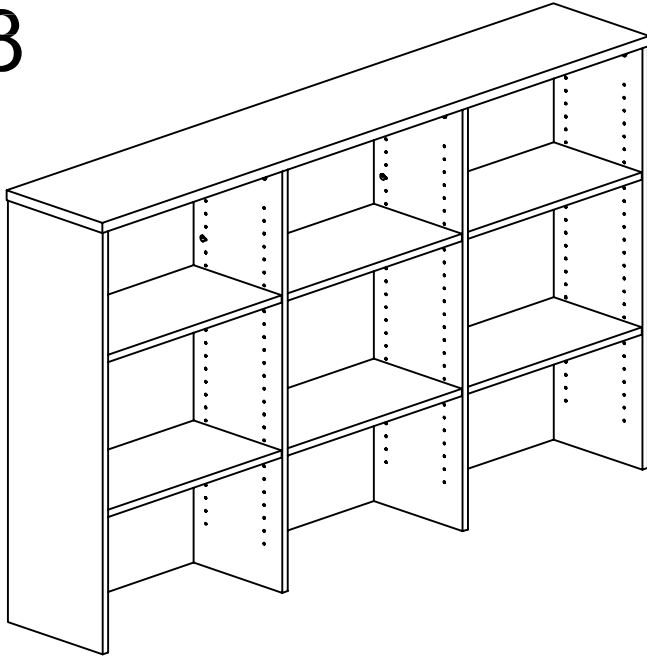

pin	6x35		1	24PCS
CAM			2	24PCS
Cam Cover			3	24PCS
Bot Mixin			4	24PCS
Bracket			5	4PCS
Screw	4x18		6	16PCS

