
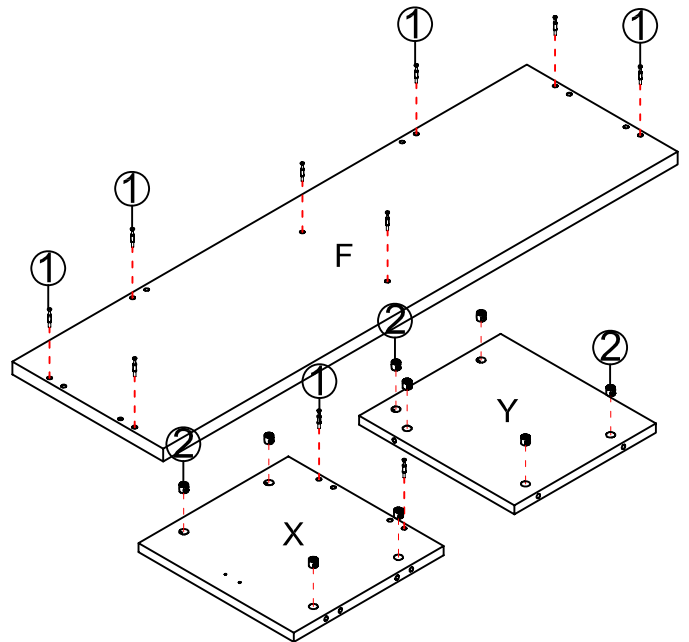
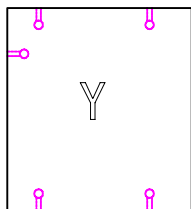
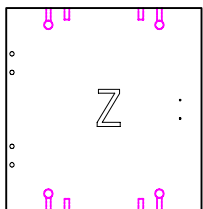
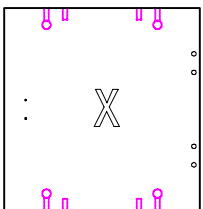
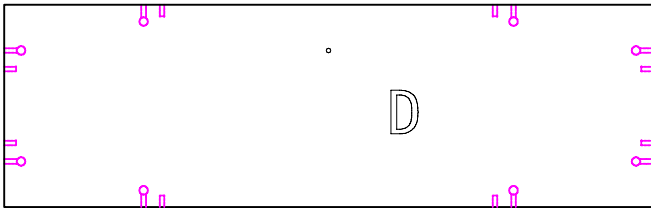
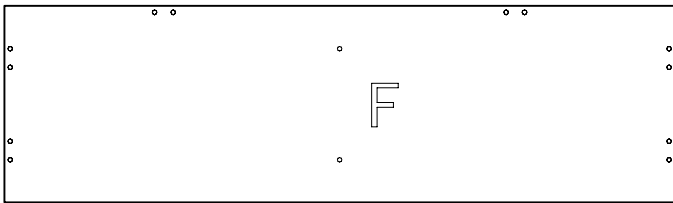
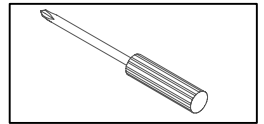
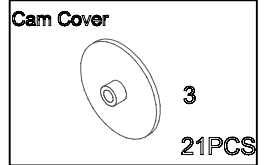
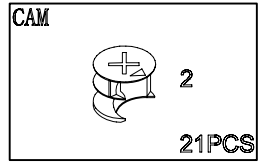
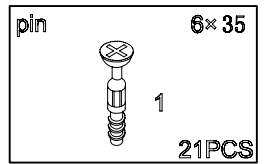


ASSEMBLY INSTRUCTIONS


rapidline
FURNITURE FOR TODAY

2011-8-25


SUPA12STACK

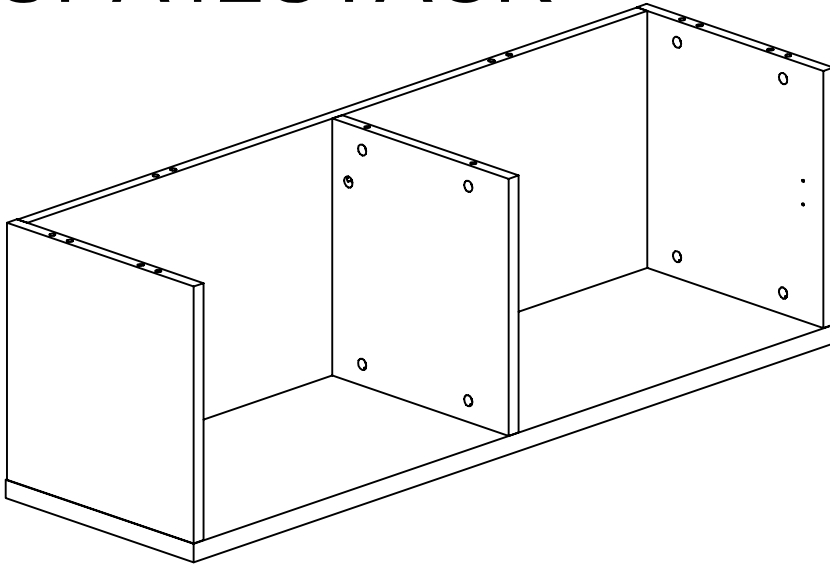

1

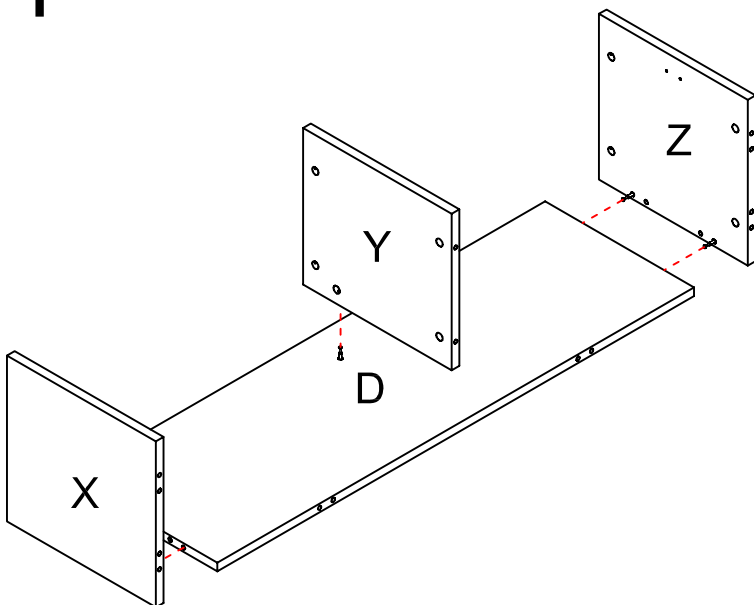

2













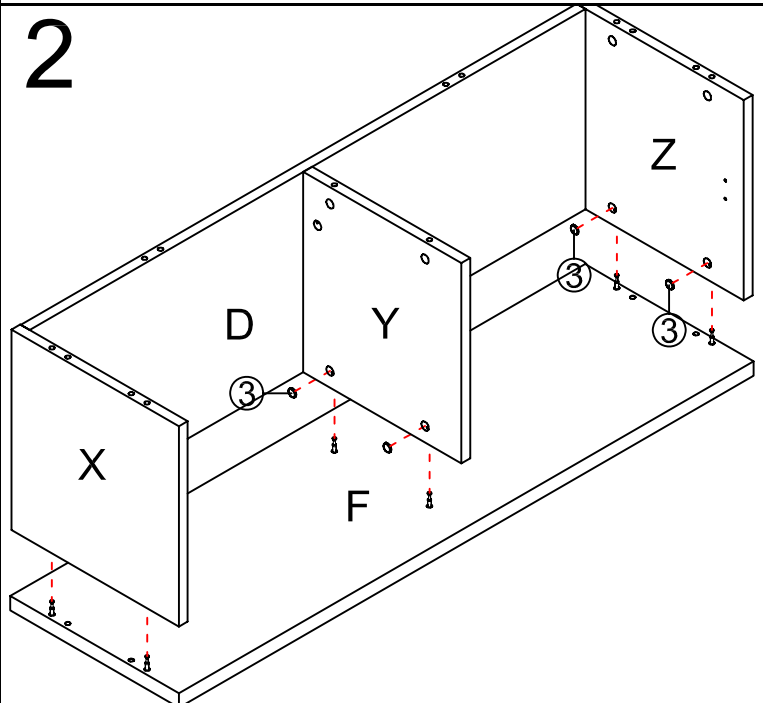


ASSEMBLY INSTRUCTIONS

SUPA15STACK SUPA18STACK

rapidline
FURNITURE FOR TODAY

2011-8-25

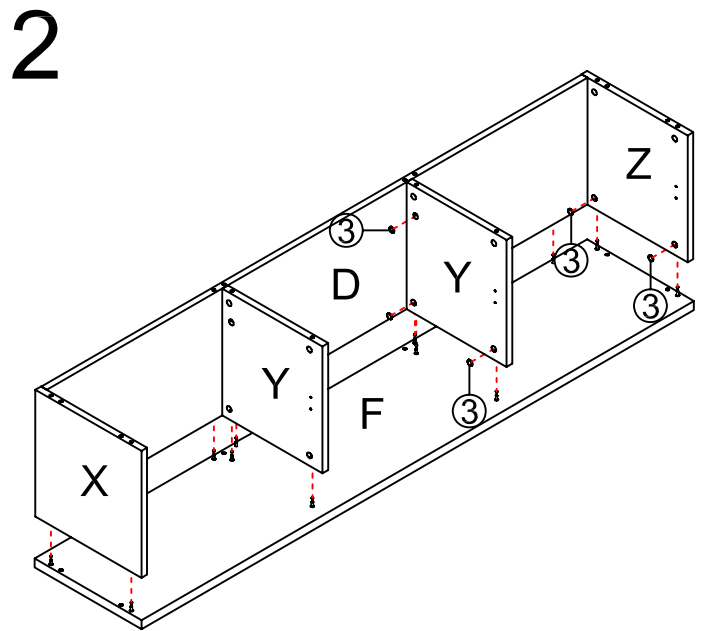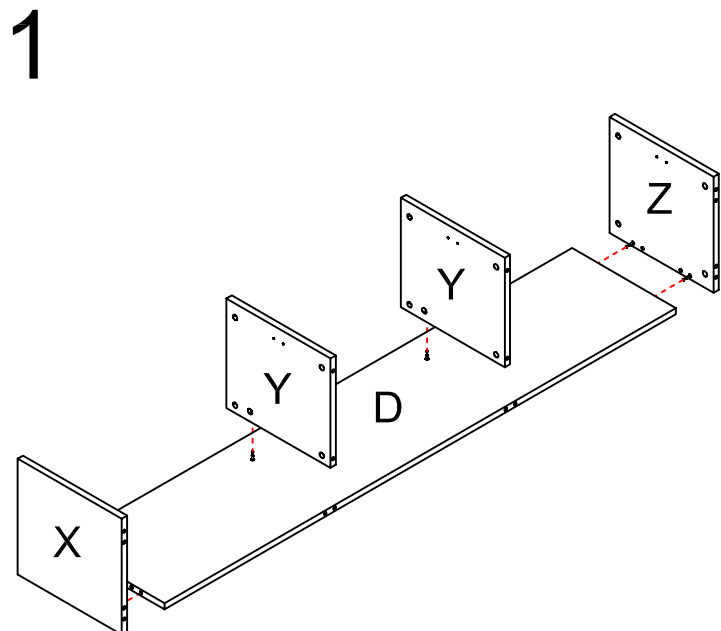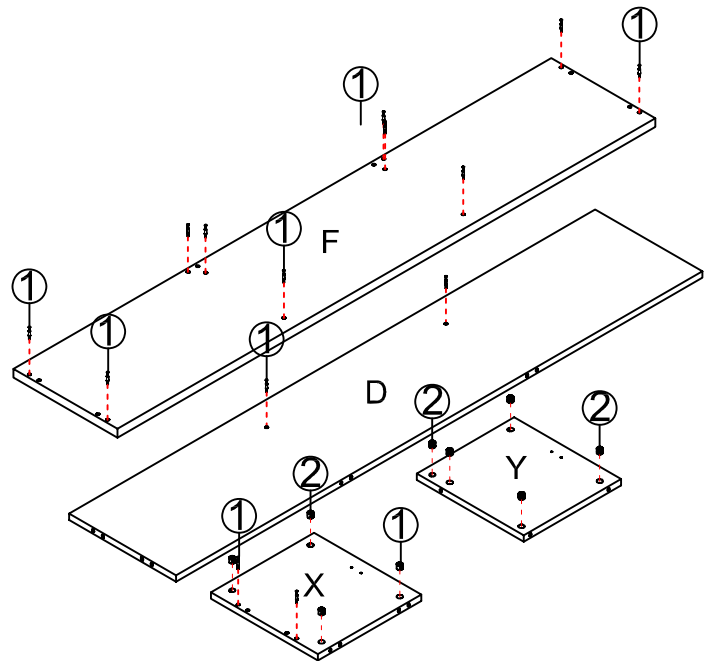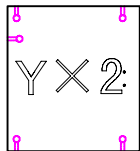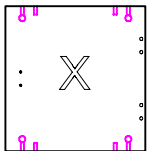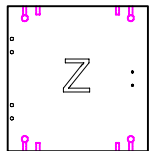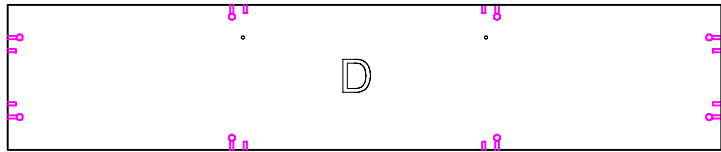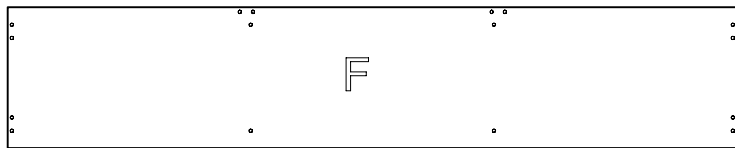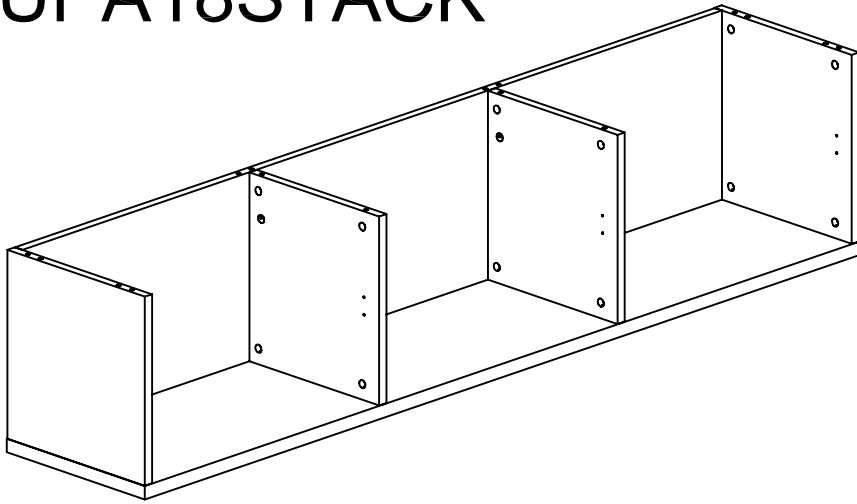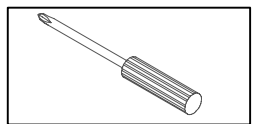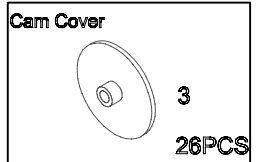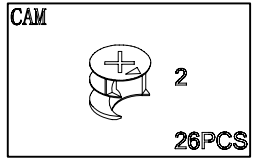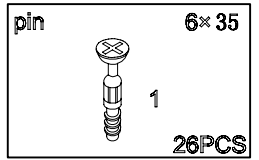


ASSEMBLY INSTRUCTIONS

SUPA21STACK

rapidline
FURNITURE FOR TODAY

2011-8-25

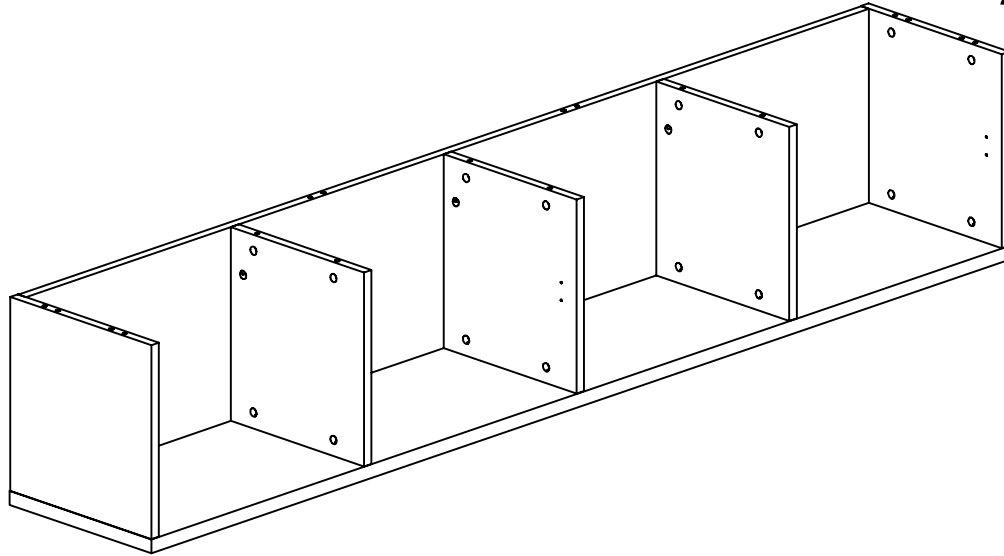

pin 6x35
1
31PCS

CAM
2
31PCS

Cam Cover
3
31PCS

