
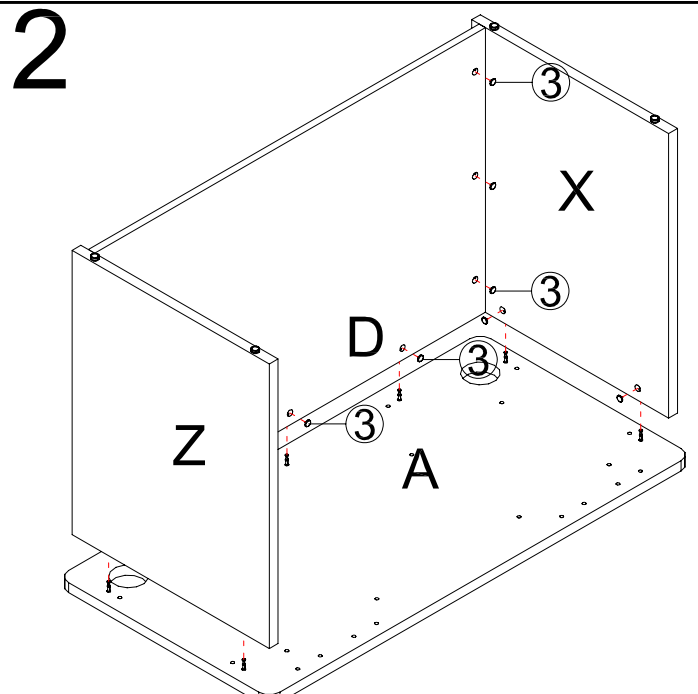
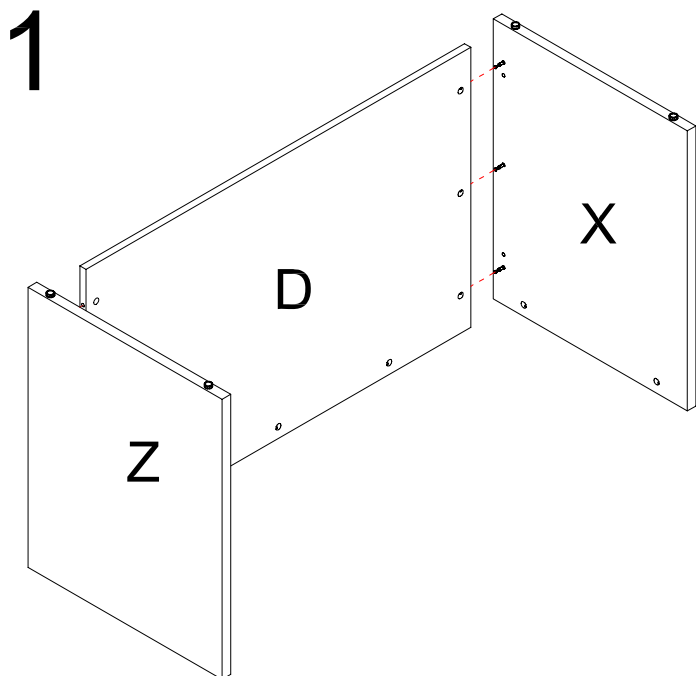
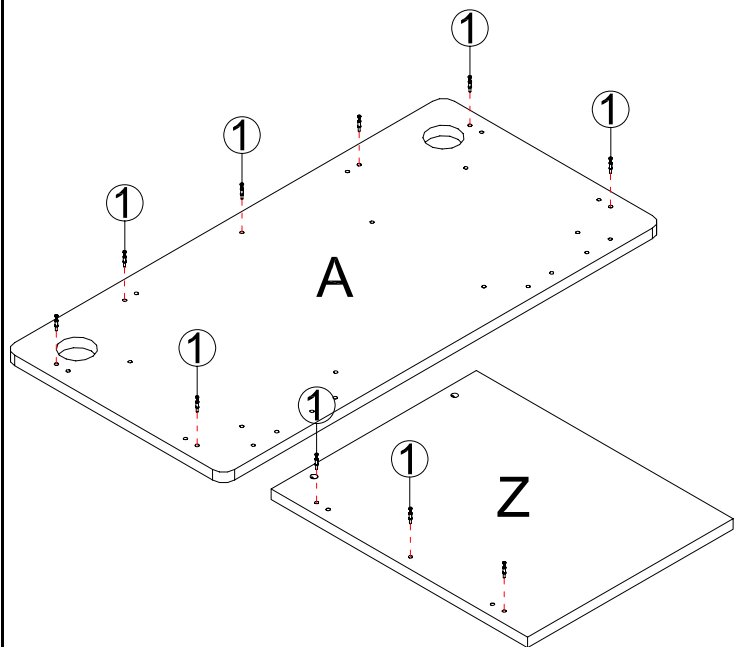
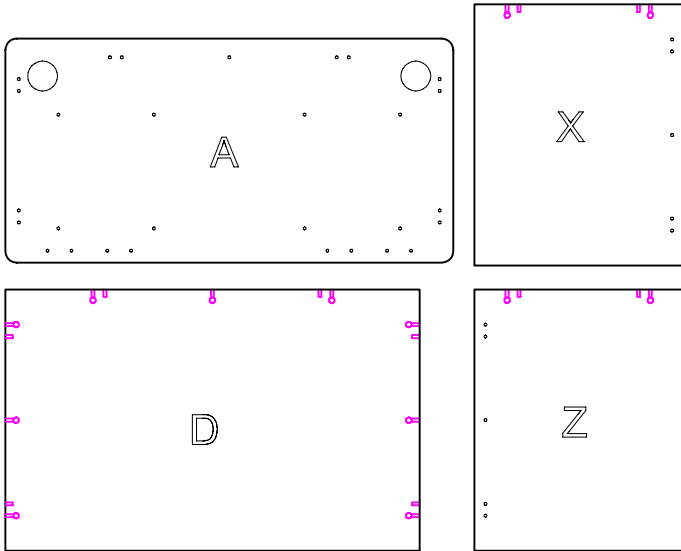
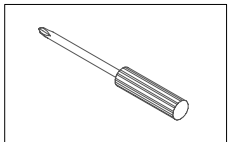
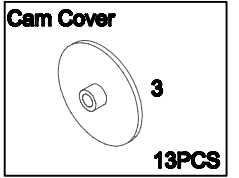
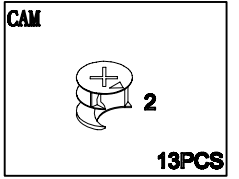
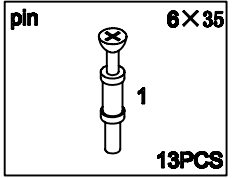


# ASSEMBLY INSTRUCTIONS

## VDK126

**rapidline**  
FURNITURE FOR TODAY  
2011-8-25










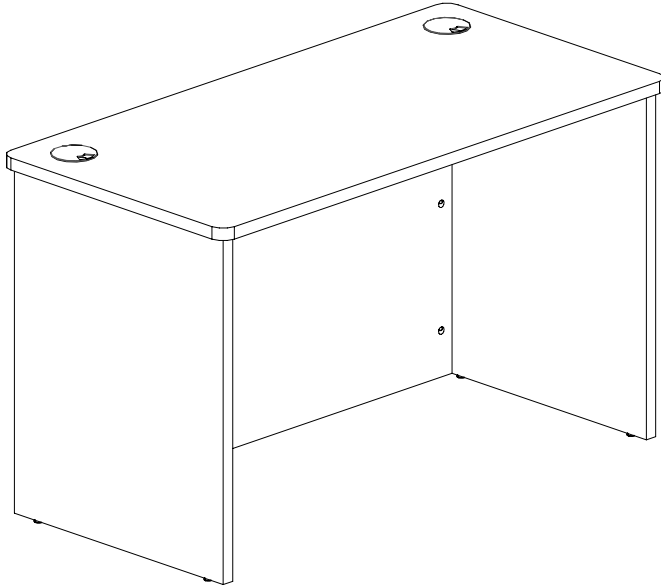


# ASSEMBLY INSTRUCTIONS


## VDK189

## VDK1575

**rapidline**  
FURNITURE FOR TODAY  
2011-8-25

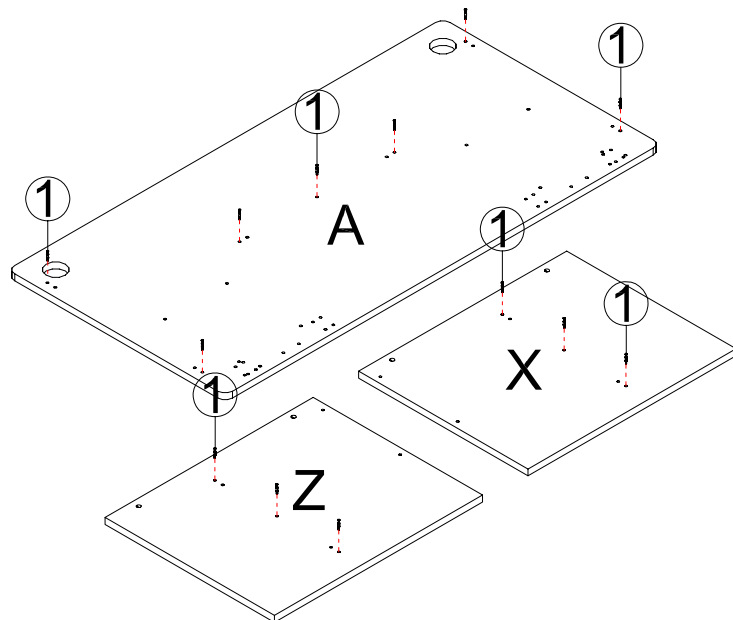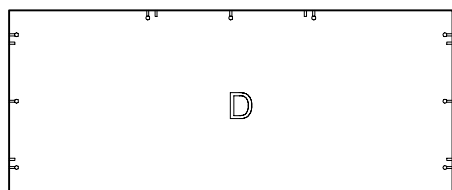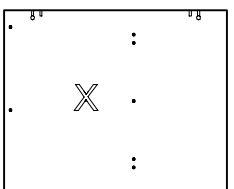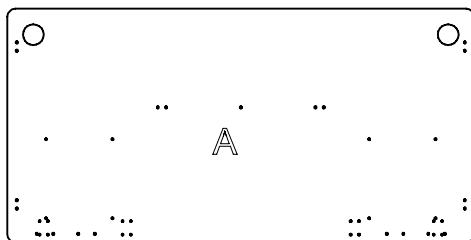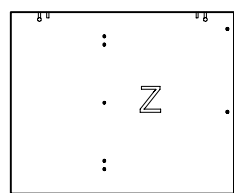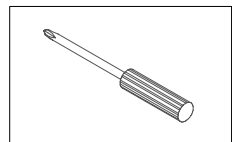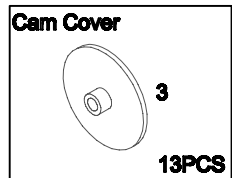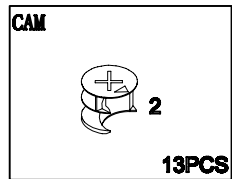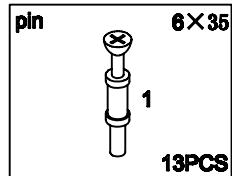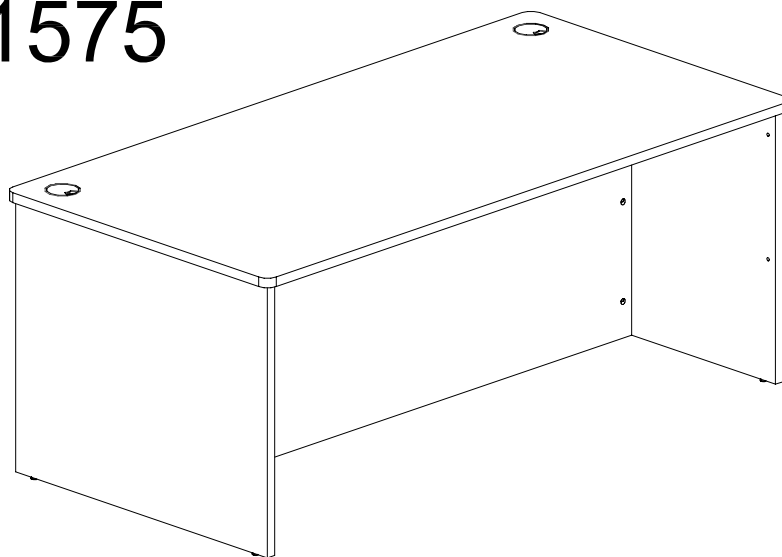

# 1

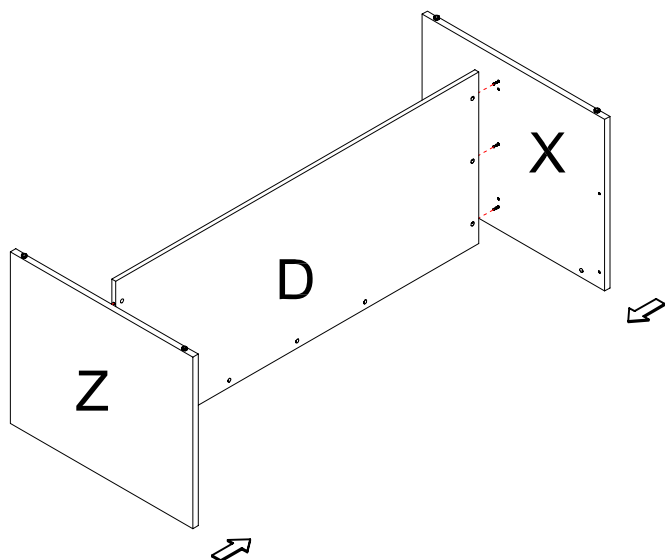

# 2

