


ASSEMBLY INSTRUCTIONS

VR6

rapidline
FURNITURE FOR TODAY
2011-8-25

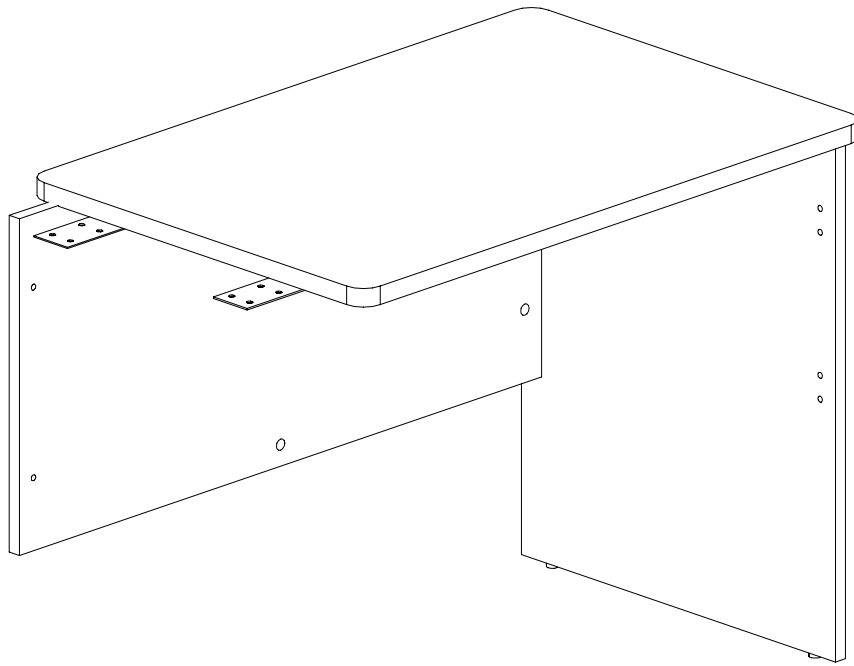

pin	6x36	1	8PCS
CAM		2	8PCS
Cam Cover		3	8PCS
CONNECTOR	200x60x2	4	2PCS
Screw	6x12	5	16PCS
Screw	6x25	6	2PCS

